


**INSTALLATION INSTRUCTIONS**

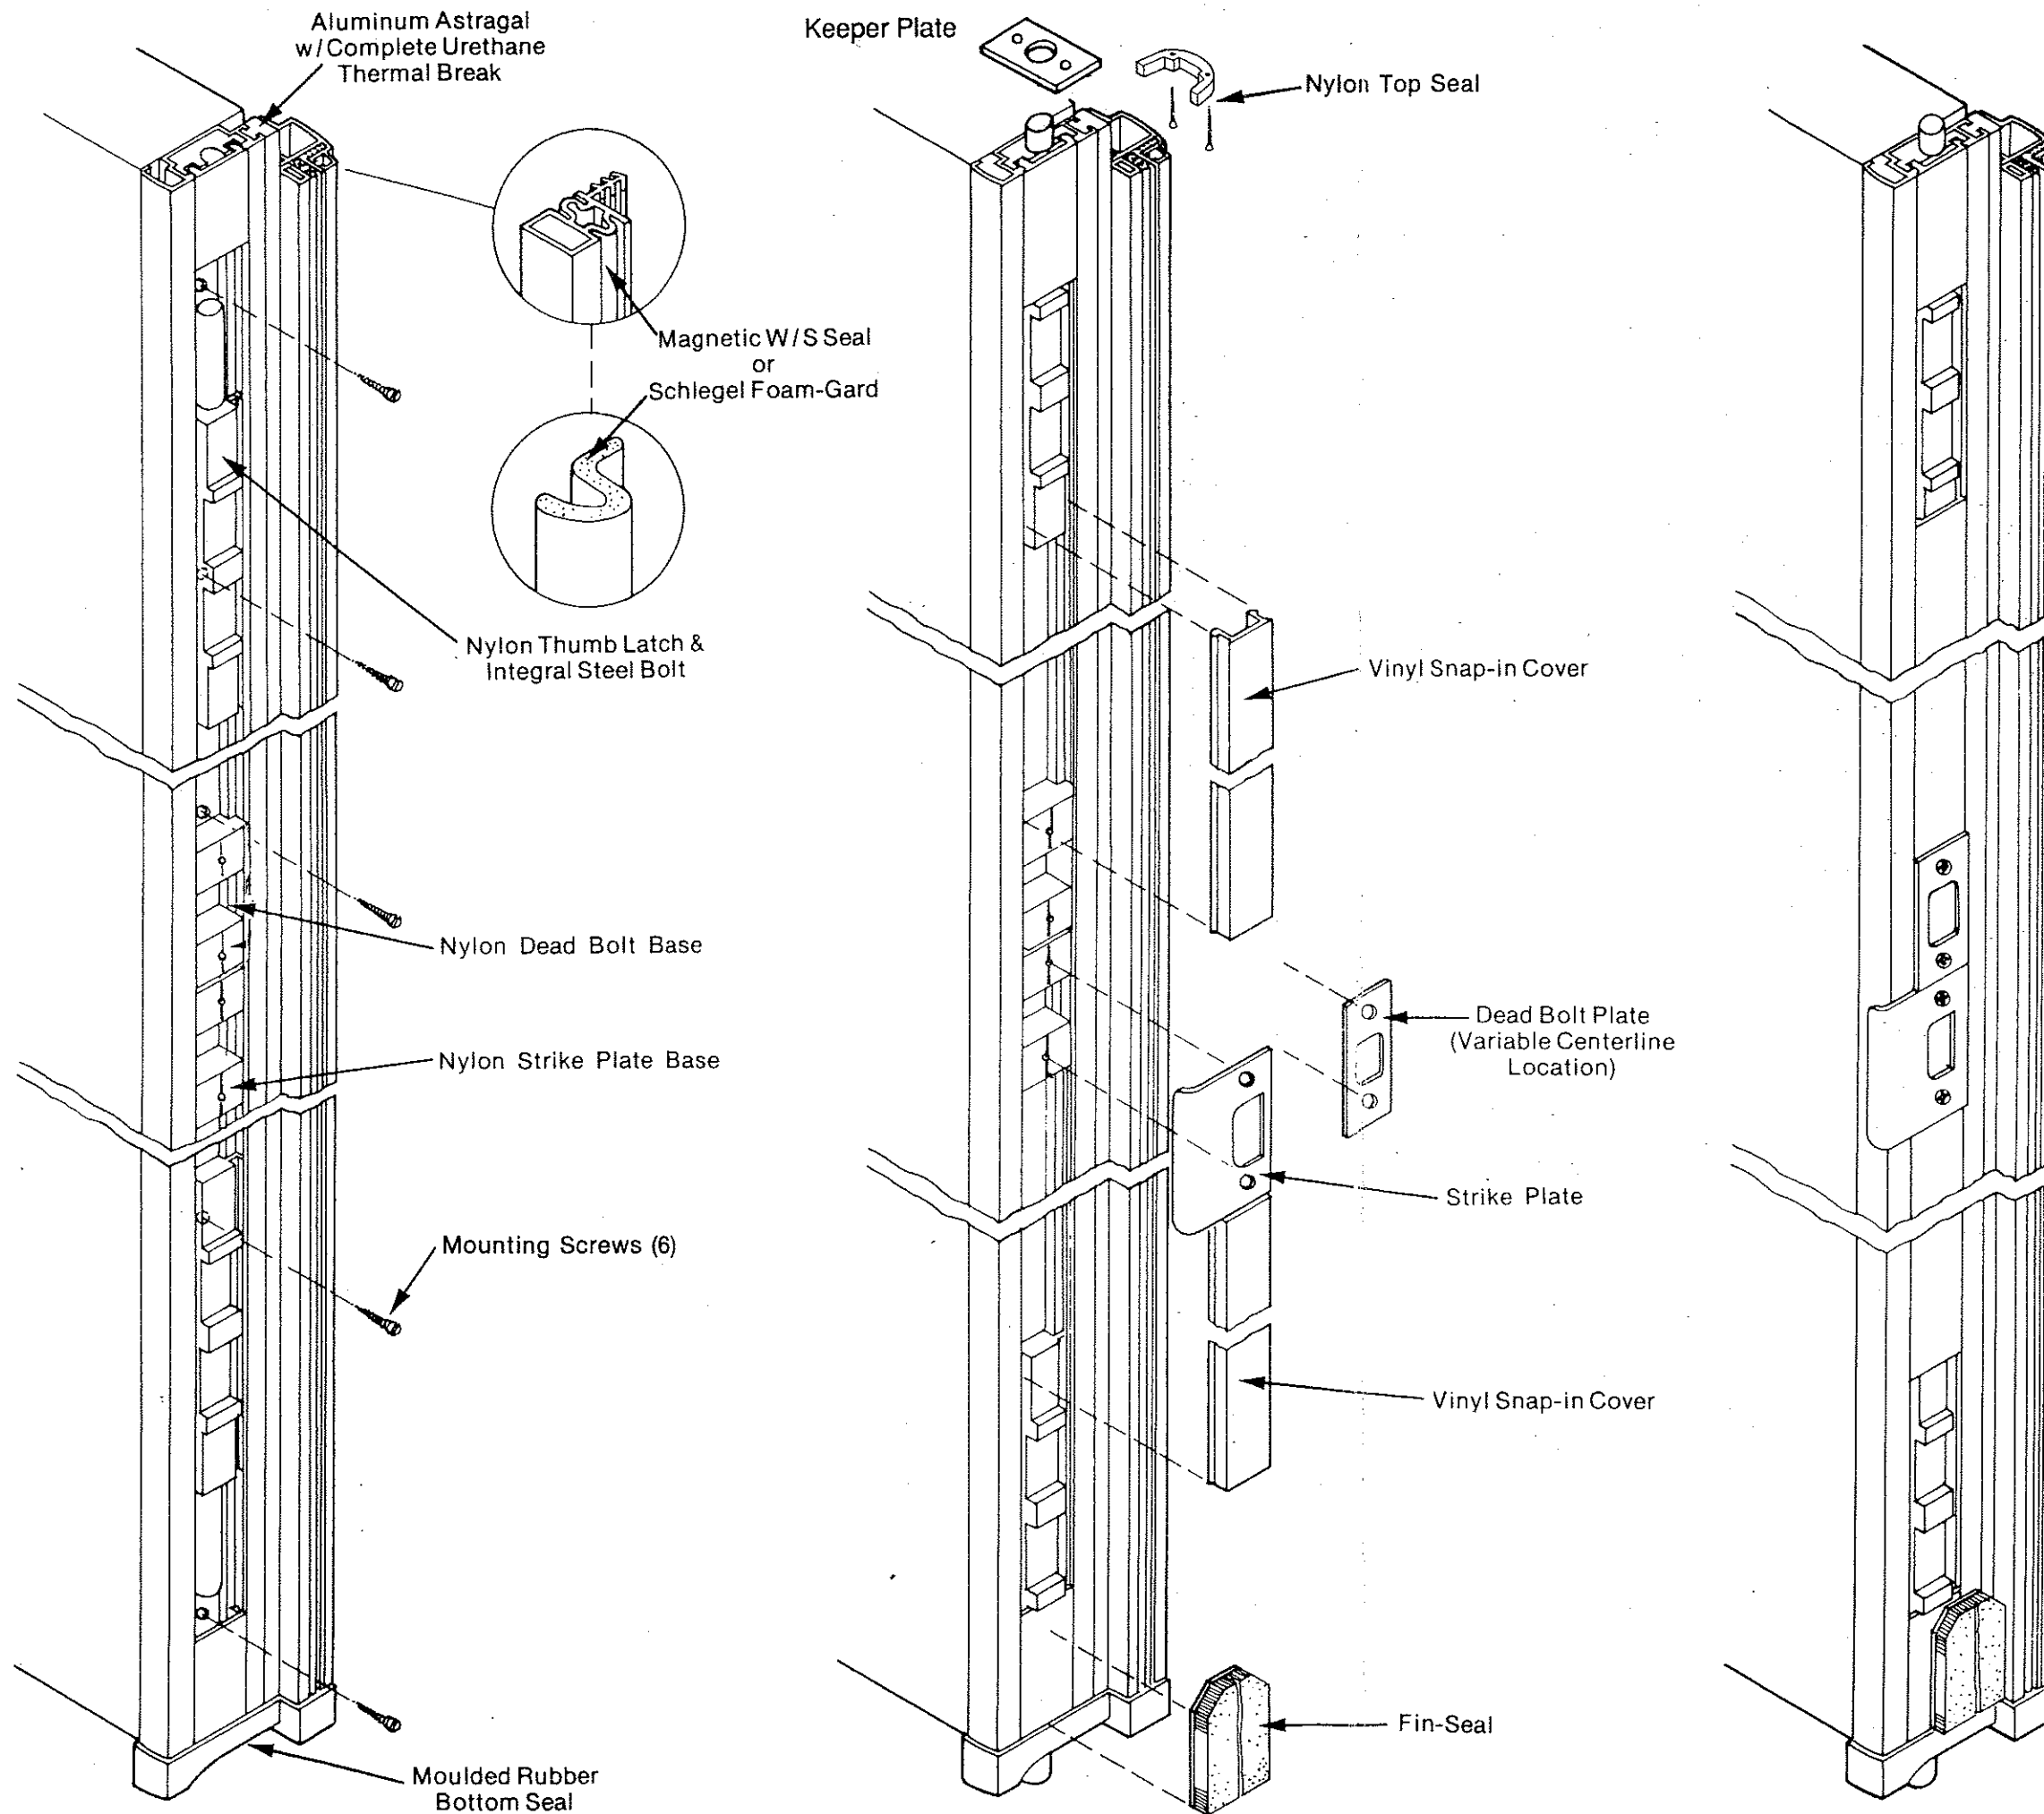

1. Set the astragal against the inactive door with the top of the astragal flush with the top of the door and the return leg tight against the face of the door. See the illustration.
2. Using the mounting holes as a template, drill 1/8" diameter holes into the door panel edge.
3. Attach the astragal to the door panel with the six #10 x 3/4" screws provided. **NOTE:** Slide the two nylon strike base plates into the area of the rectangular notch before installing any mounting screws below the notch.
4. Slide the top bolt up against the header and the bottom bolt down against the sill. Mark their locations on the head and sill. Drill a 1/8" diameter pilot hole at each location. Enlarge both holes with a 3/8" drill bit. **NOTE:** Be prepared to possibly encounter drilling resistance due to internal reinforcement walls in the head/sill on certain model doors.
5. Attach the brass keeper plate to the header with the two #6 x 3/4" brass screws provided and install the black plastic sleeve plug onto the hole in the sill. Close the door and engage both bolts into the holes.
6. Attach the latch strike plate to the lower nylon base with the two #8x1/2" screws provided. Tighten the screws only enough to hold the assembly in position, but still able to slide it into the final position later.
7. Close the active door and adjust the latch strike assembly vertically so that the latch bolt is centered in the strike plate. Open the door and firmly tighten the screws in the assembly.
8. If a dead bolt is used in this installation, repeat steps 6 & 7 above for the dead bolt strike plate. If a dead bolt is not used, simply position the assembly directly above the latch strike. See the illustration.
9. Open both doors. Adjust each nylon thumb latch so that the slide bolt is flush with the end of the astragal. Measure the distance between the end of the thumb latch and the strike plates. Cut a piece of the snap-in vinyl cover to the proper length and snap into place. If there is a space between the two strike plates, cut a piece to fill that area also.
10. Apply the fin-seal dust plug to the bottom of the astragal, close both doors and install the nylon top seal to the header with the two #6x3/4" screws provided. See the illustration.

